

## ALUMINUM LO-flo MINIMUM INSTALLATION REQUIREMENTS

### MINIMUM INSTALLATION REQUIREMENTS














**INSTALLATION CONSIDERATIONS.** Installation factors to be considered when applying the Aluminum LO-flo are as follows:

**Turbulent Airflow.** The unique use of honeycomb airflow straightener permits accurate flow measurement in the presence of moderate air turbulence. The distances from air turbulence producing fittings, transitions, etc., shown below in the Minimum Requirements for Installation, are required to assure accurate Aluminum LO-flo operation.

**Airborne Contaminants.** The levels of air filtration and cleanliness associated with commercial HVAC systems, whether supply/return/exhaust/outside air, are satisfactory for operation of the Aluminum LO-flo. Applications containing airborne contaminants may require periodic manual or automatic cleaning using compressed air applied via the signal fittings, and/or physical cleaning.

**Direction of Airflow.** The Aluminum LO-flo will function only with the airflow passing through the air straightener section prior to entering the total and static pressure sensing section. To prevent improper installation, each Aluminum LO-flo is marked with an arrow indicating the required direction of airflow.

**MINIMUM REQUIREMENTS FOR INSTALLATION. Note:** Aluminum LO-flo locations shown are **NOT** ideal. They indicate the minimum clearance required from air turbulence producing sources. Wherever possible, the Aluminum LO-flo should be installed where greater runs of straight duct (or clearances) than shown exist.

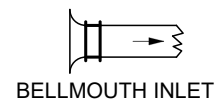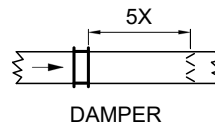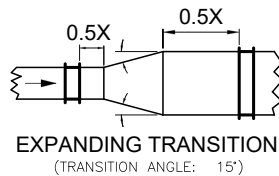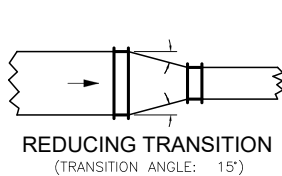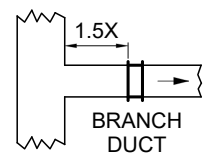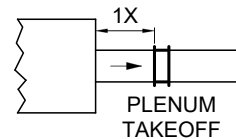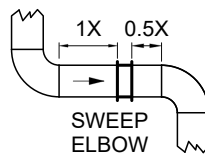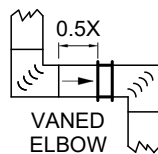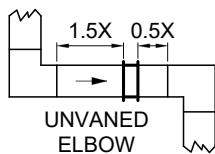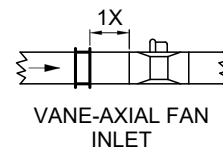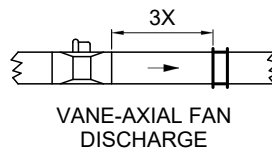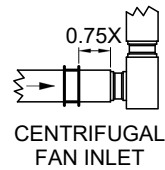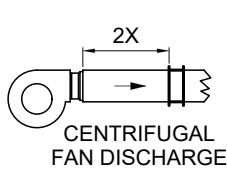

Equivalent Duct Diameter X:

Rectangular Duct:  $X = \frac{2(H \times W)}{H + W}$

Circular Duct: X = Duct Diameter