


VOLU-probe & VOLU-probe/SS

MINIMUM QUANTITY OF PROBES


NOTE

Below VOLU-probe & VOLU-probe/SS installations
assume compliance with proper probe orientation to, and
required minimum distances from, air turbulence producing sources.

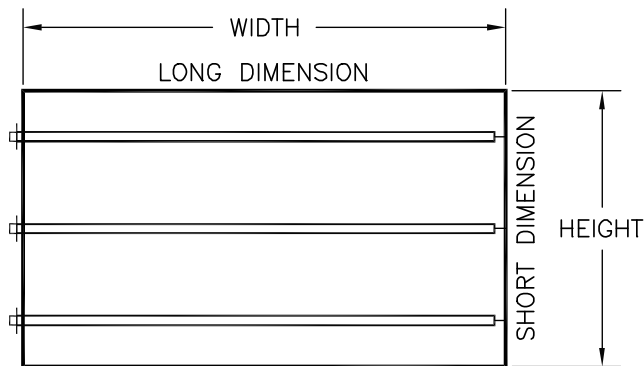

FOR SQUARE AND RECTANGULAR DUCTS

Height Dimension	Min. Qty of VOLU-probes Recommended
8" to 12"	1
> 12" to 30"	2
> 30" to 54"	3
> 54" to 84"	4
> 84" to 120"	5
> 120" to 180"	6

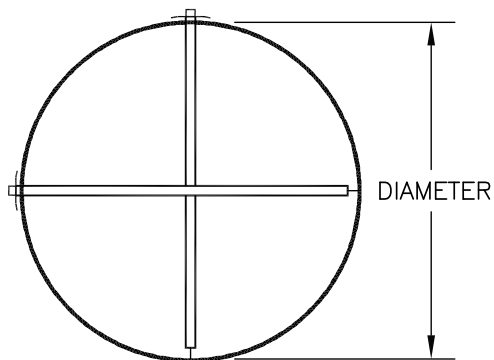

FOR CIRCULAR DUCTS

Diameter	Min. Qty of VOLU-probes Recommended
8" to 18"	1
> 18" to 72"	2
> 72"	3