


VOLU-probe & VOLU-probe/SS

MINIMUM QUANTITY OF PROBES

NOTES


The below indicated minimum probe quantities are required to meet published accuracy and assume compliance with the minimum installation requirements.

If probes are to be installed parallel to the height (short) dimension, use the width (long) dimension to determine the quantity of probes required.

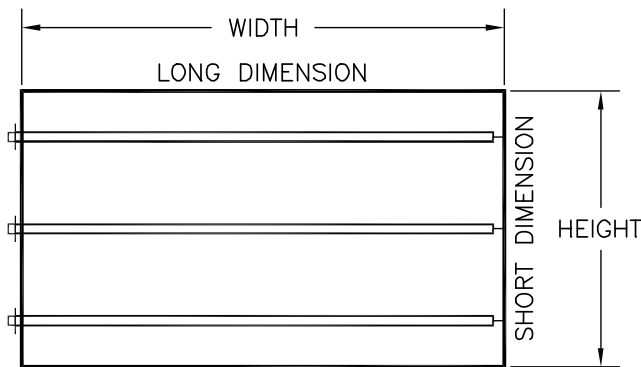

FOR SQUARE AND RECTANGULAR DUCTS

Height Dimension	Min. Qty of VOLU-probes Recommended
8" to 12"	1
> 12" to 30"	2
> 30" to 54"	3
> 54" to 84"	4
> 84" to 120"	5
> 120" to 180"	6

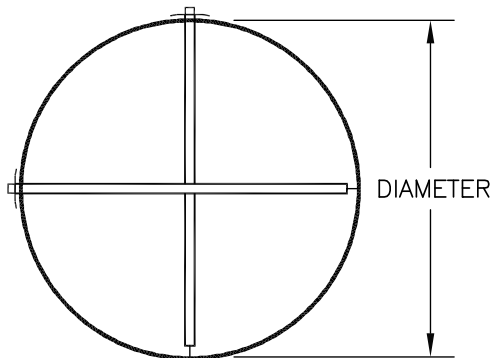

FOR CIRCULAR DUCTS

Diameter	Min. Qty of VOLU-probes Recommended
8" to 18"	1
> 18" to 72"	2
> 72"	3

